

DC-25T Operating Instructions

- 1.) The rocker switch marked stop/start will either start or stop the timer.
- 2.) The rocker switch marked up/down determines how the timer counts, if the switch is in the *up* position the timer will count up, if the switch is in the *down* position the timer will count down.
- 3.) The black push-button will reset the timer to zero when the rocker switch is in the count up position. The black push-button will reset the timer to the last value displayed before the timer was started when the rocker switch is in the count down position.(Timer must be stopped to reset)
- 4.) The red push-button is to set the seconds on the timer when the rocker switch is in the stop position.
- 5.) Both the red push-button and the black push-button pressed at the same time when the timer is stopped will fast set the seconds and minutes.